


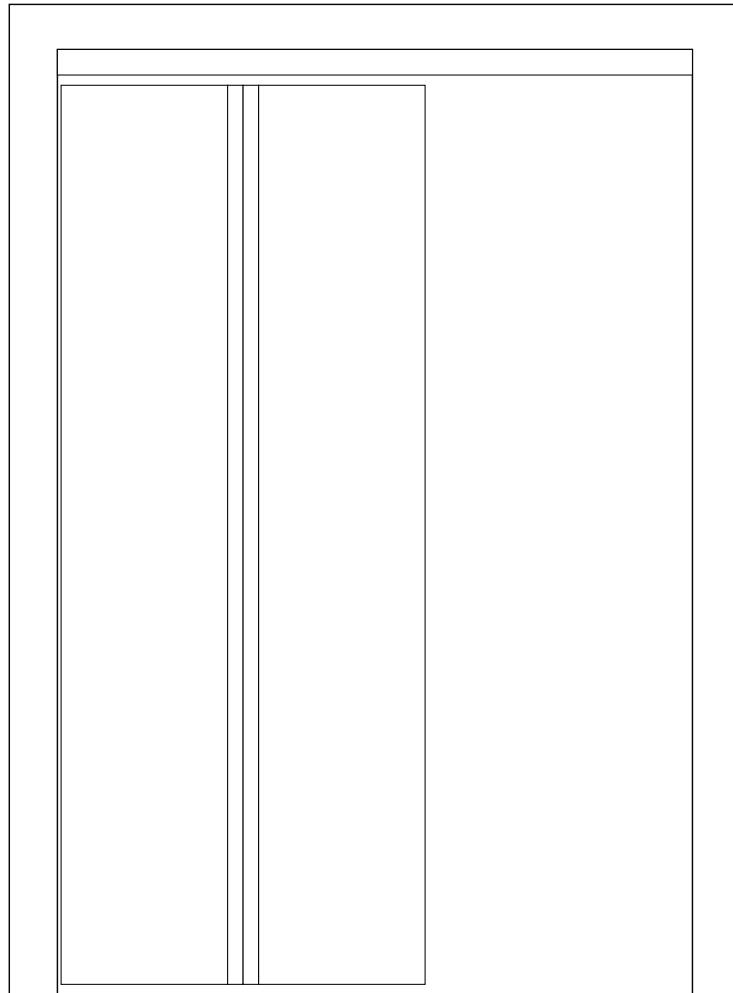


Bi-fold




Tools:




Pull Saw

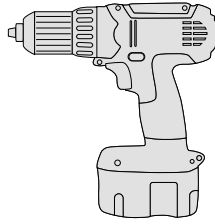


Power Drill

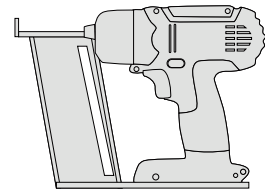

Finishing Nailer
ONLY

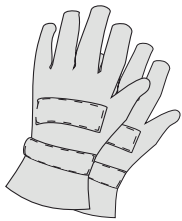


Work Gloves




Safety Glasses




Level

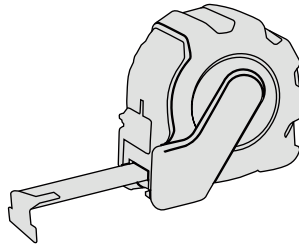


Measure

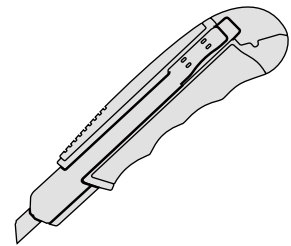


Box
Cutter

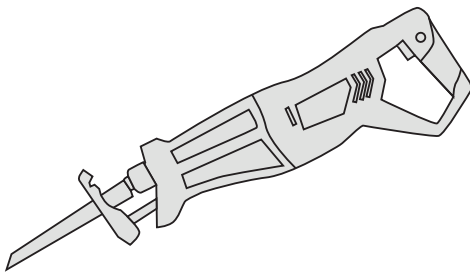


Reciprocating saw

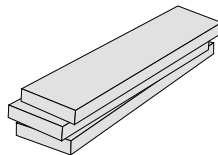


Wedges




Rubber
Hammer

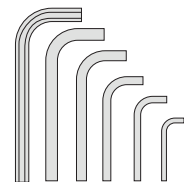


Hex Keys

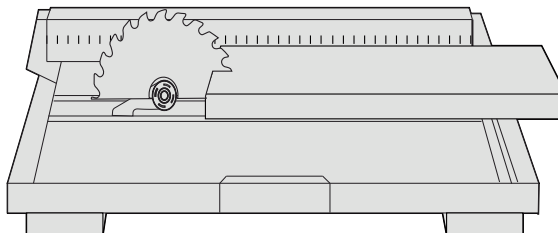


Worksite Table Saw

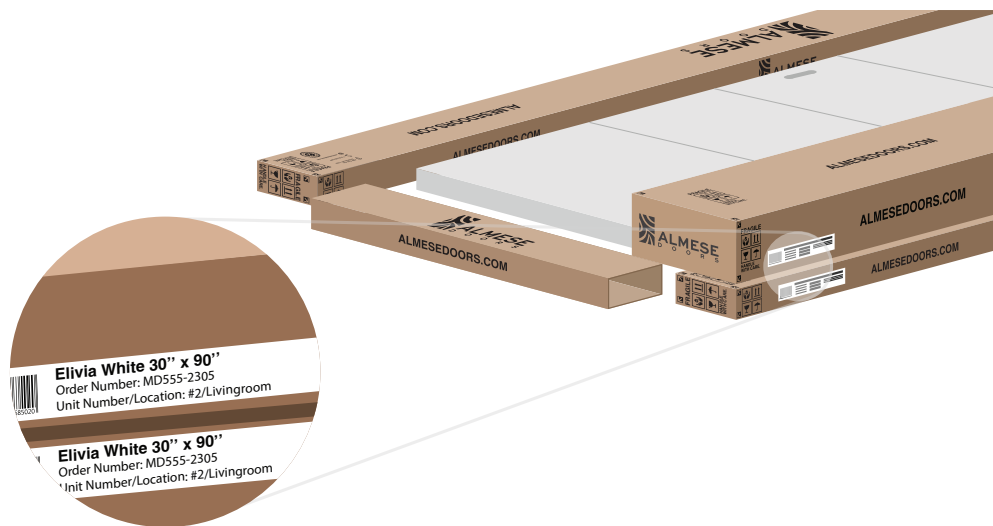

- 1 Using the label, locate the parts with the matching tags.

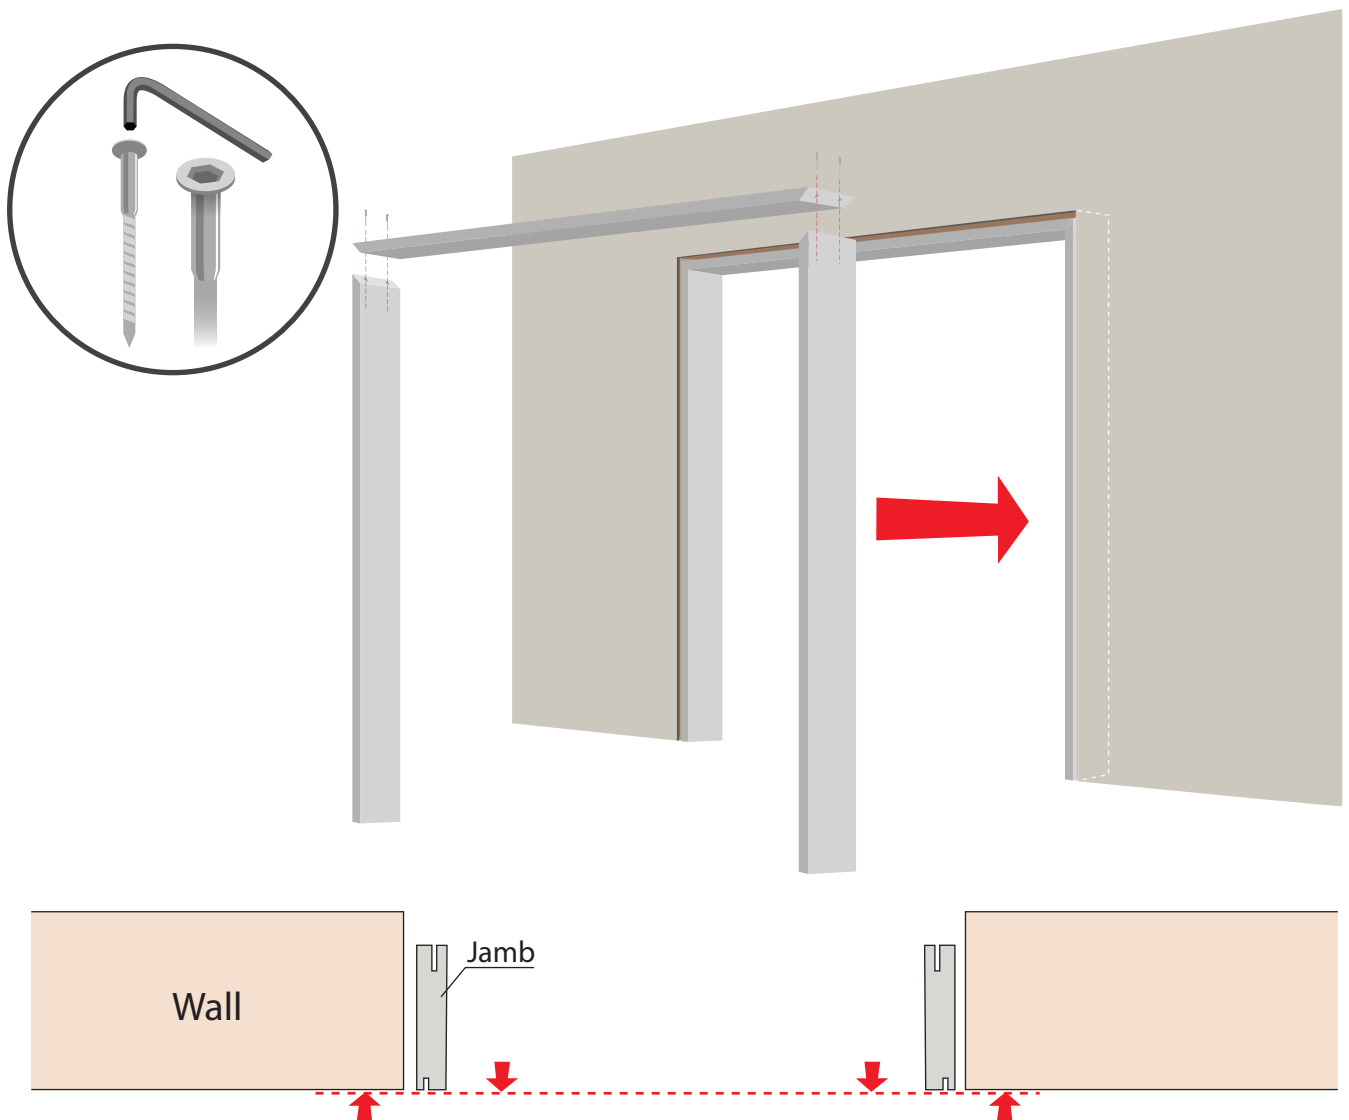



- 2 Using a hex wrench, attach the head to the jambs with socket screws. Fit the jamb into the opening. Align the frame's edge with the wall.

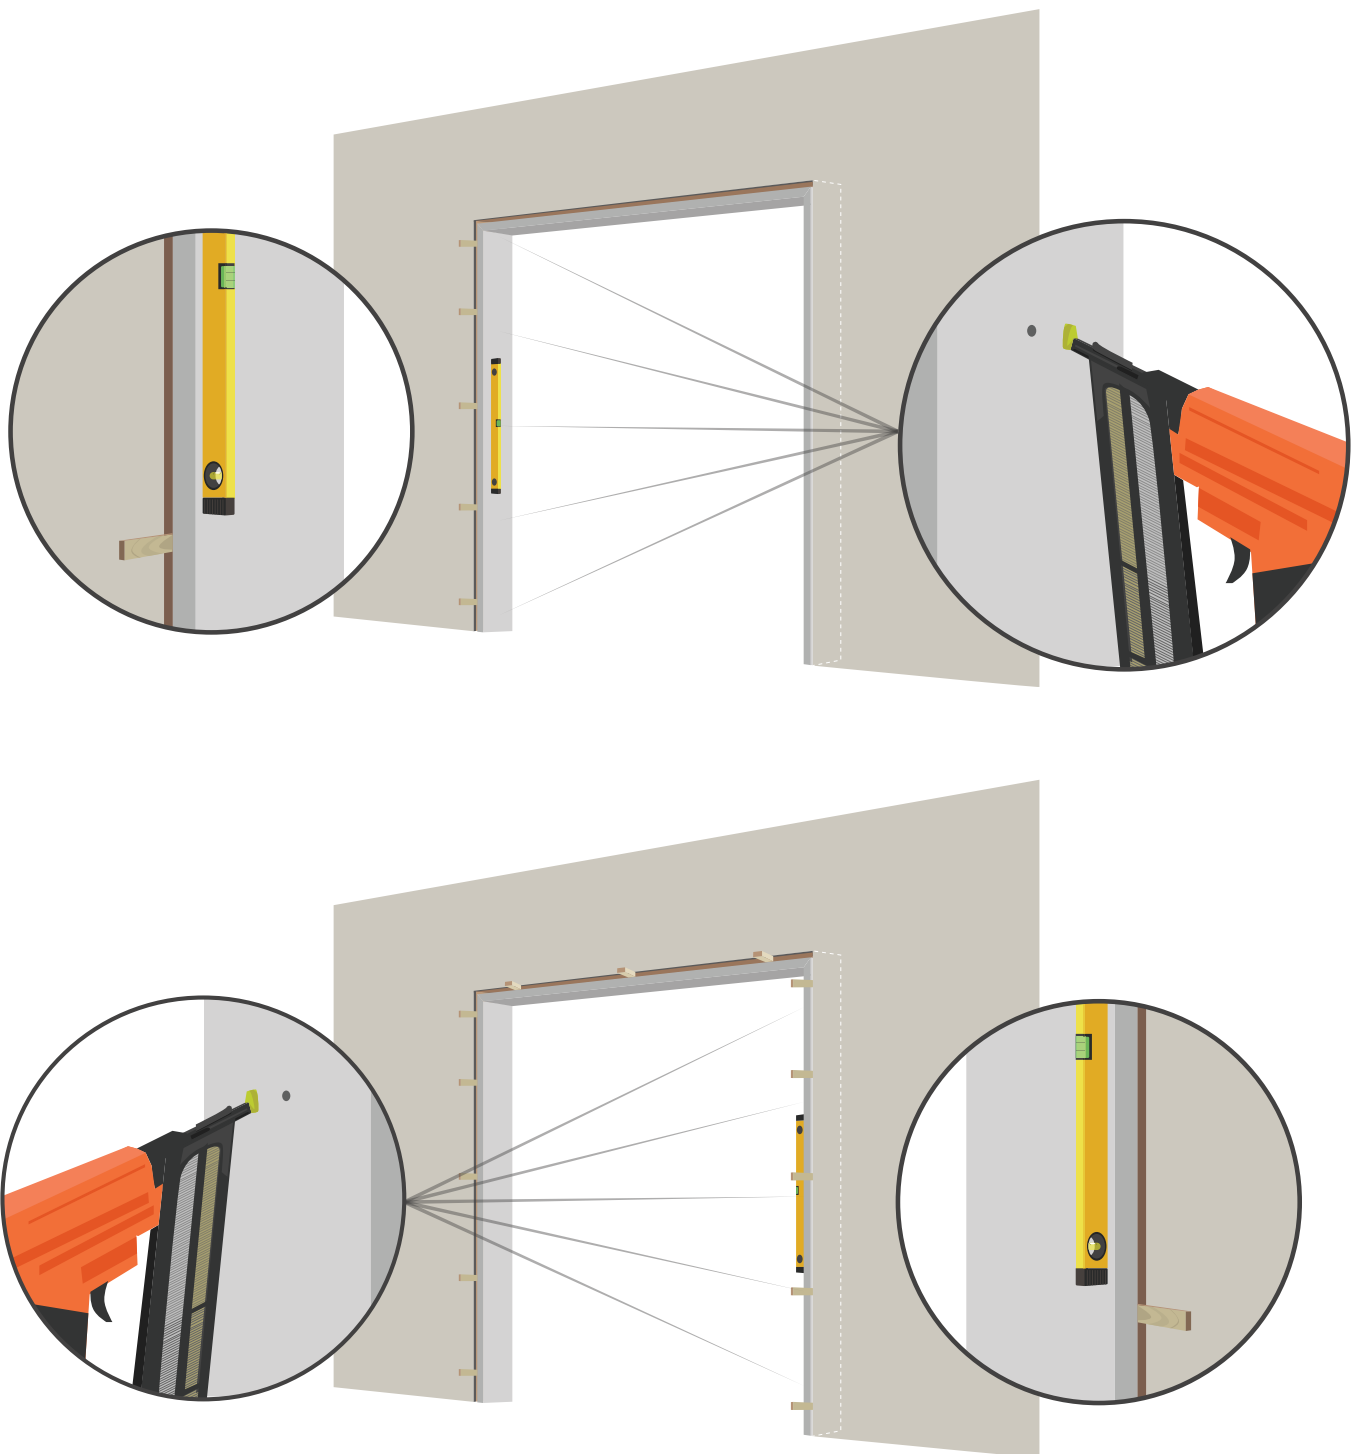


- 3** Using a level, make sure the hinge side of the jamb is perfectly vertical. Insert wedges and secure the jambs temporarily using a nailgun with 10d finish nails.

- 4 Using a table saw, cut the L-Casings and Extension* in accordance with the wall thickness (if necessary).

*Extension - for 5-1/8" wall thickness only.

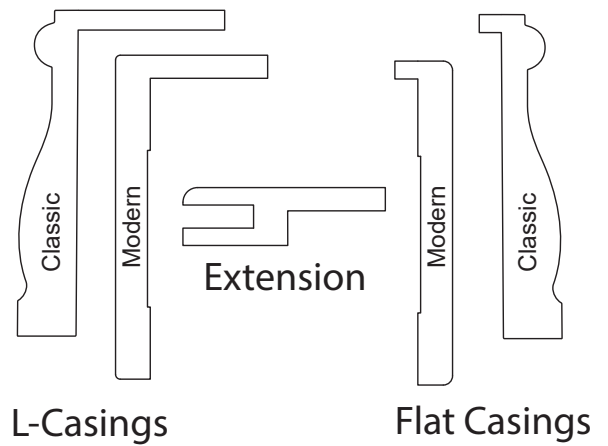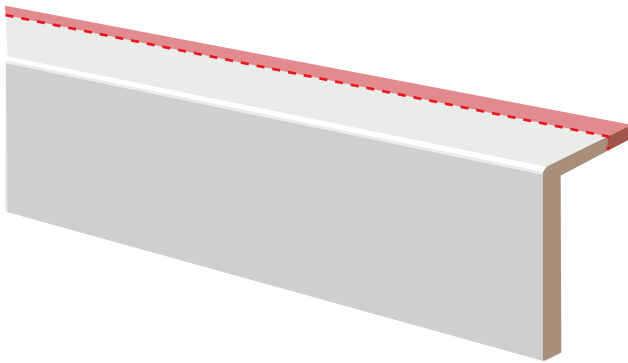


Wall Thickness From $3\frac{7}{8}"$ to $4\frac{3}{8}"$

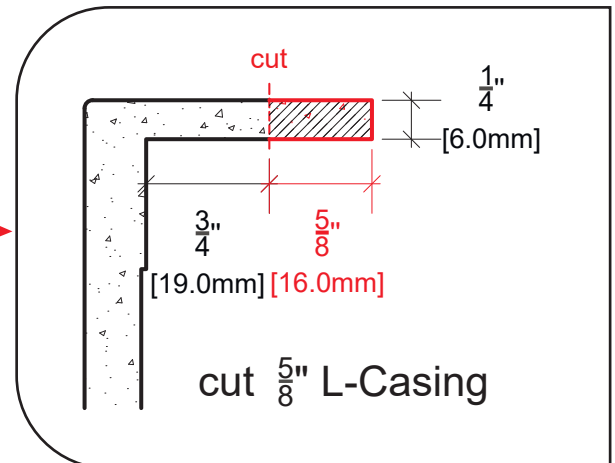

Wall Thickness From $4\frac{1}{2}"$ to $5"$




Wall Thickness From $5\frac{1}{8}"$ to $5\frac{7}{8}"$

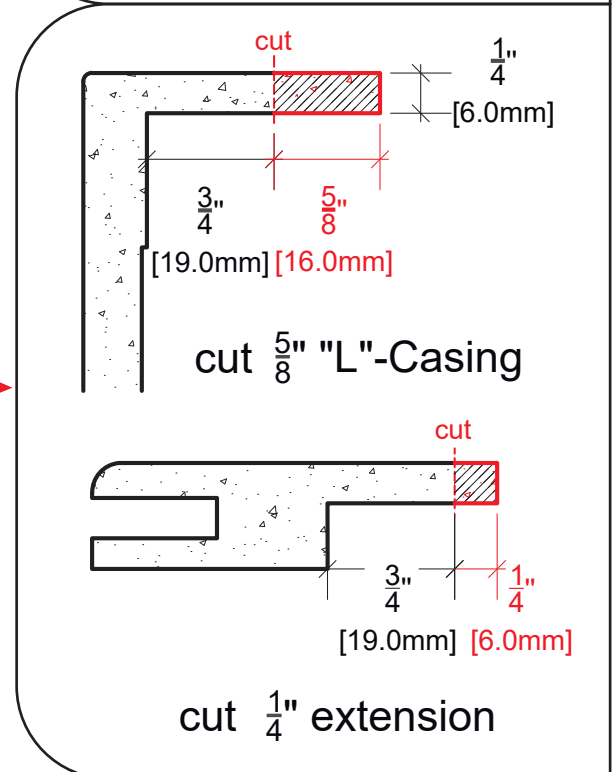


Wall Thickness From $6"$ to $7"$




- 5 **FOR 5/1/8" - 7" WALL THICKNESS ONLY**
Measure the distance from A to the floor.
Measure the distance from B to the floor.
Measure the distance from A to B.

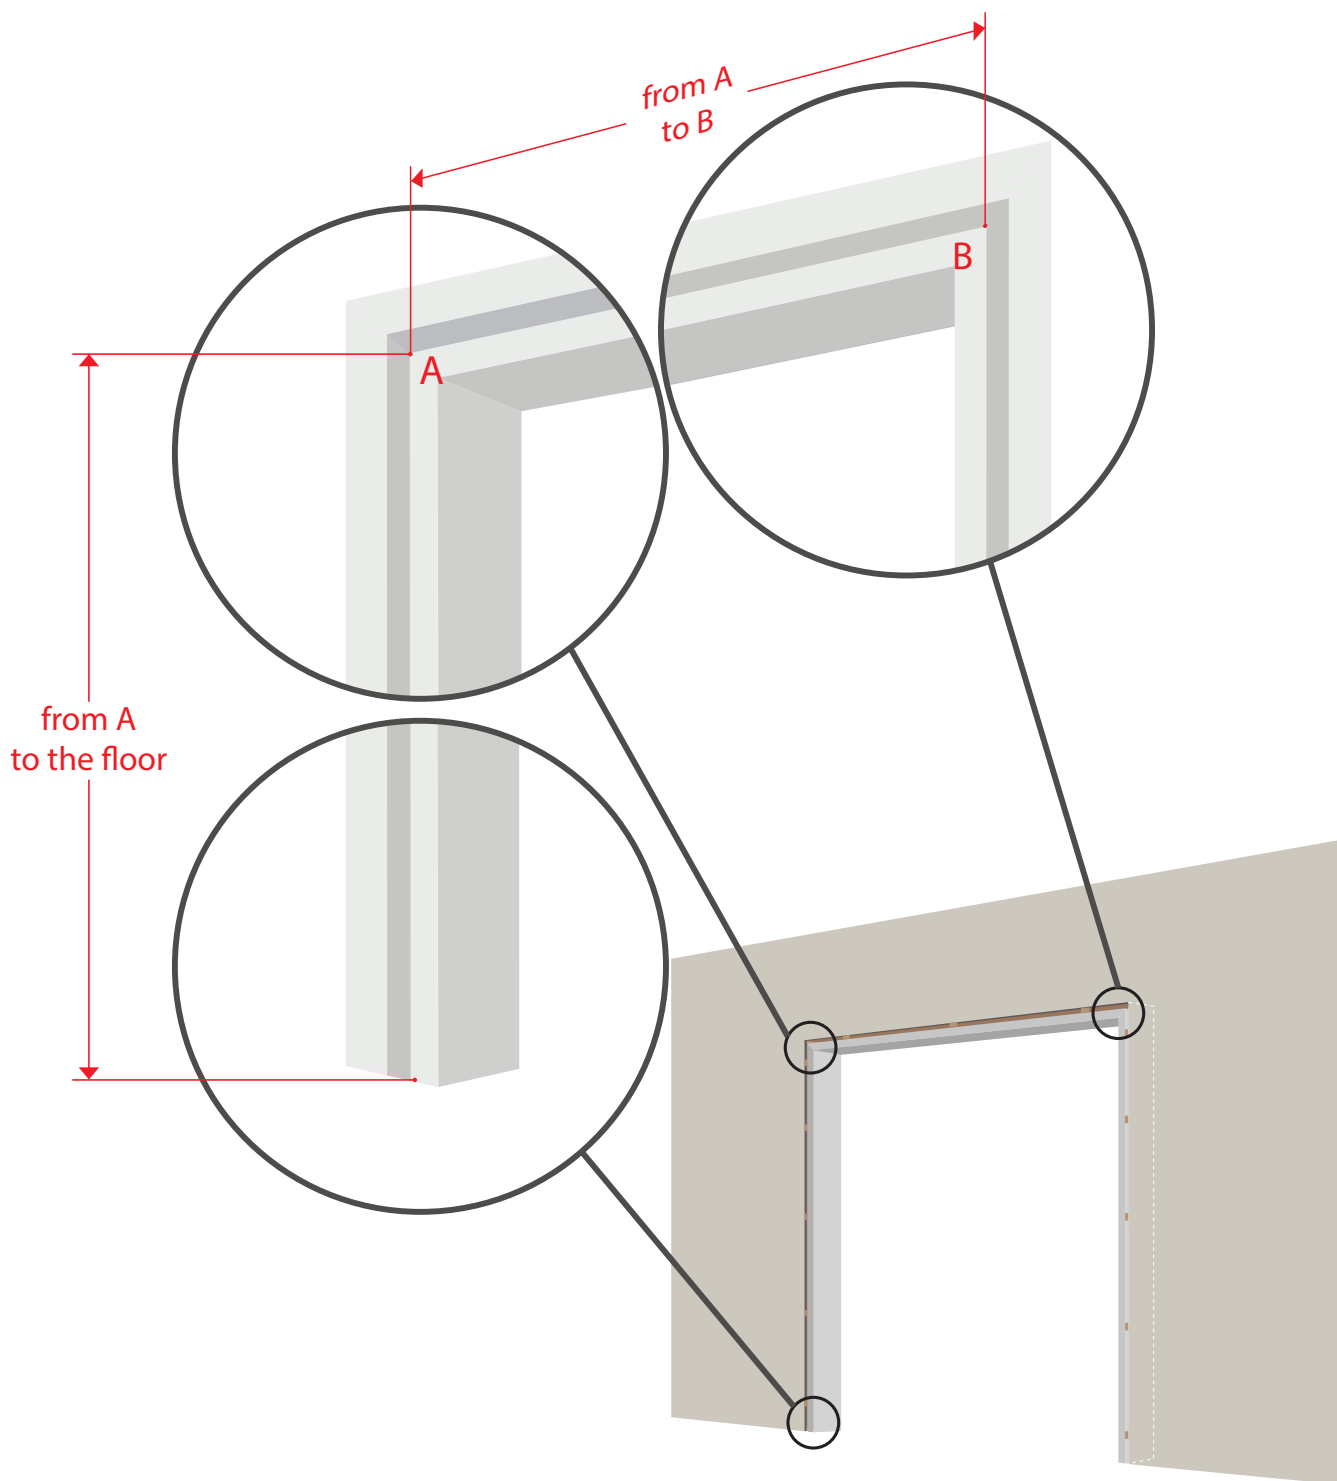


- 6** **FOR 5-1/8" - 7" WALL THICKNESS ONLY**
Using a pencil (shown in the picture), mark the distance from A to the floor and from B to the floor for vertical extensions.
Using a pull saw, cut the vertical extensions at a 45° angle where marked.

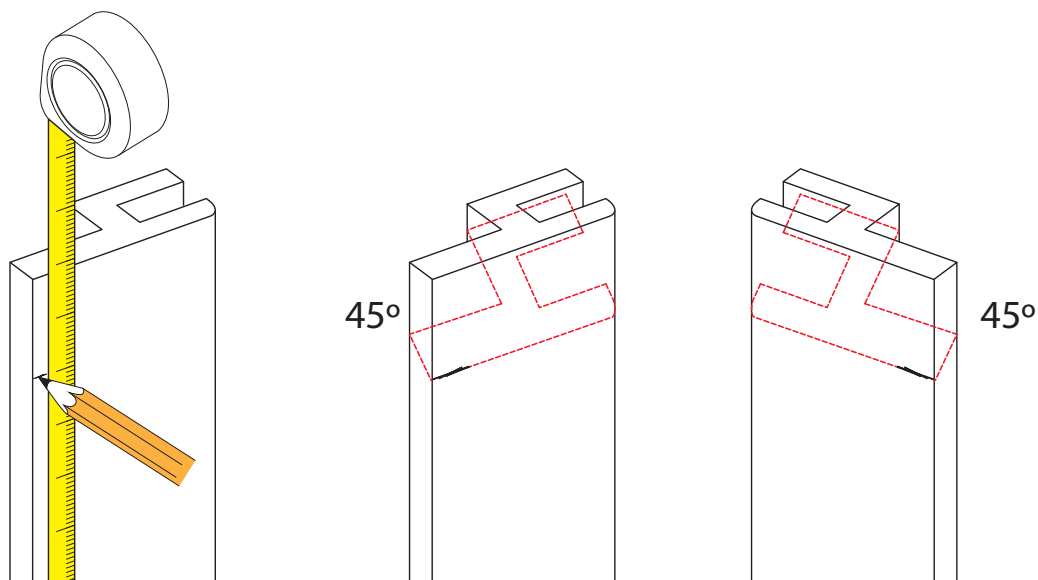


- 7** **FOR 5-1/8" - 7" WALL THICKNESS ONLY**
Using a pencil (as shown in the picture), mark the distance from A to B for the header extension.
Using a pull saw, cut the header extension at a 45° angle where marked.

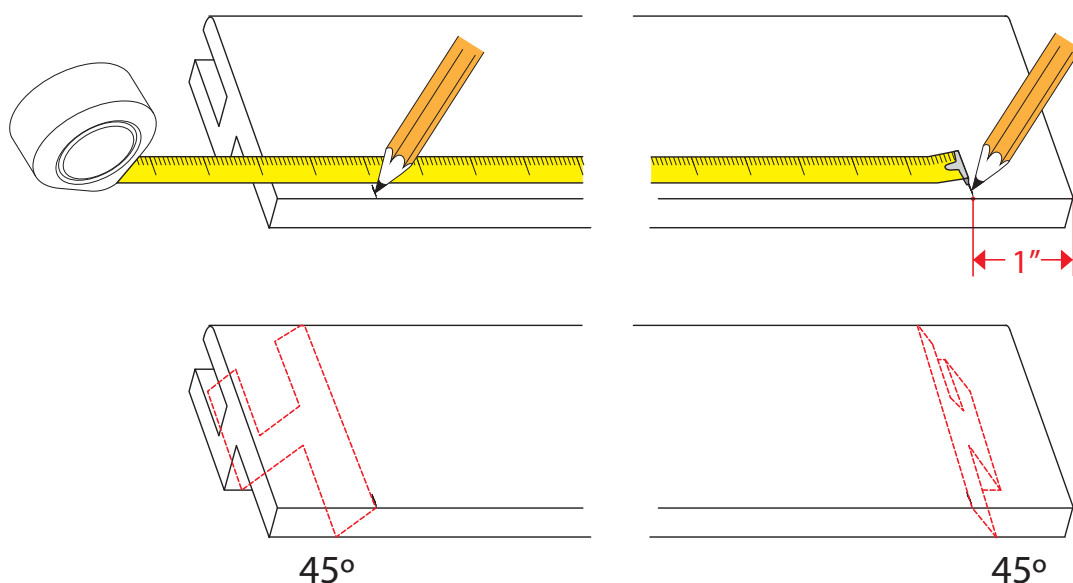


- 8** **FOR 5-1/8" - 7" WALL THICKNESS ONLY**
Connect vertical and header extensions using nailgun with 10d finish nails.

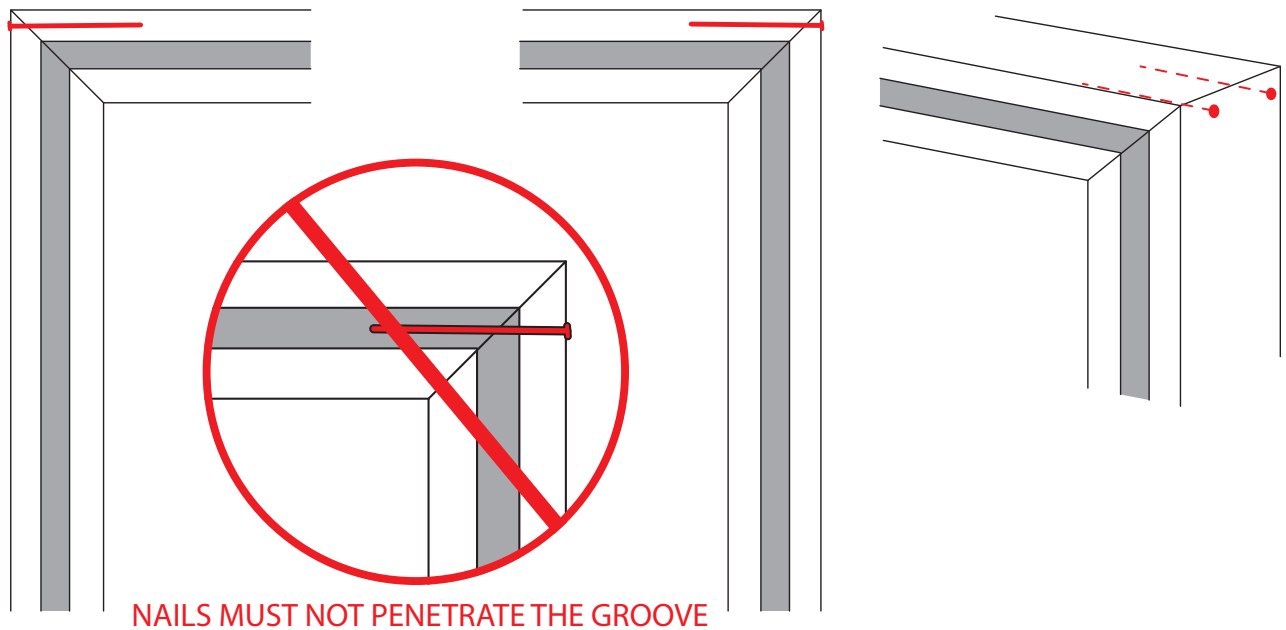

- 9** **FOR 5-1/8" - 7" WALL THICKNESS ONLY**
Fit the extension in the jamb in keeping with the wall thickness (as in the picture) and secure in place using a nailgun with 10d finish nails.

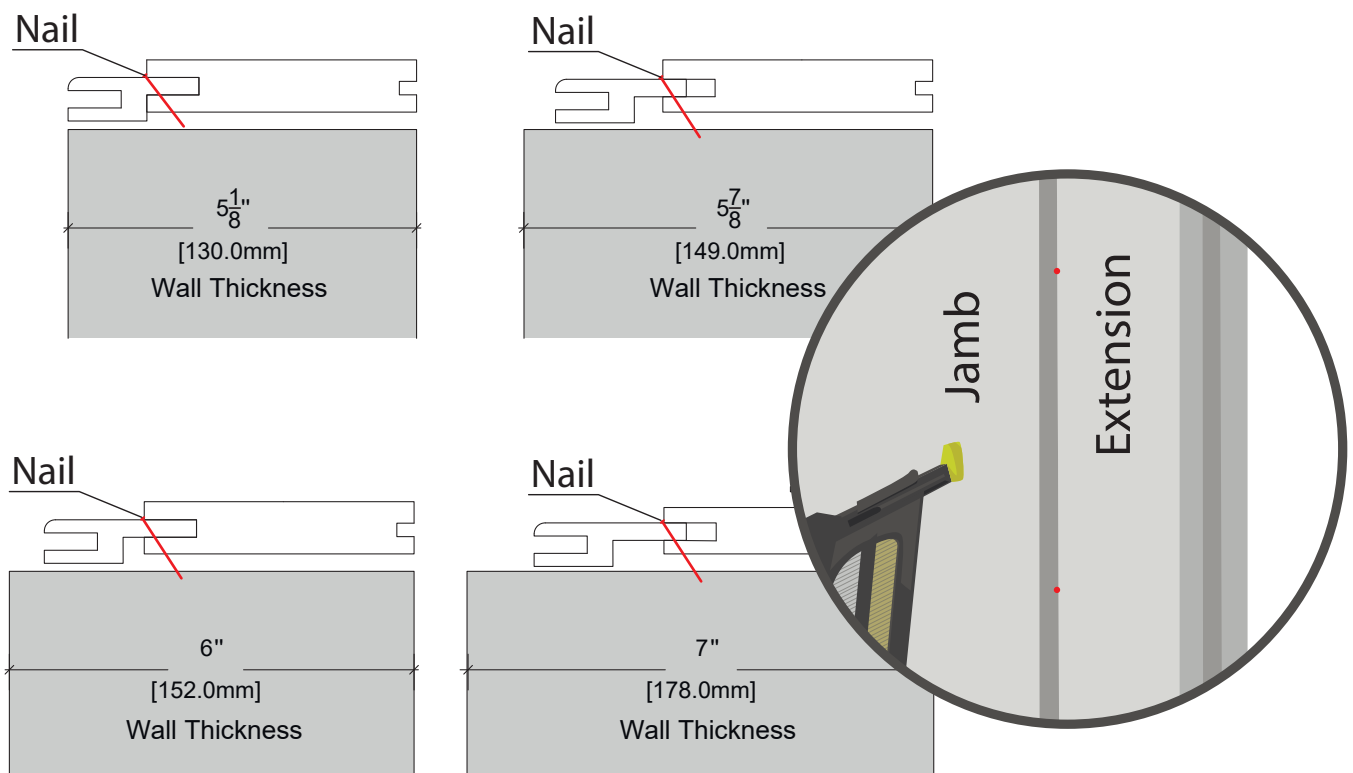


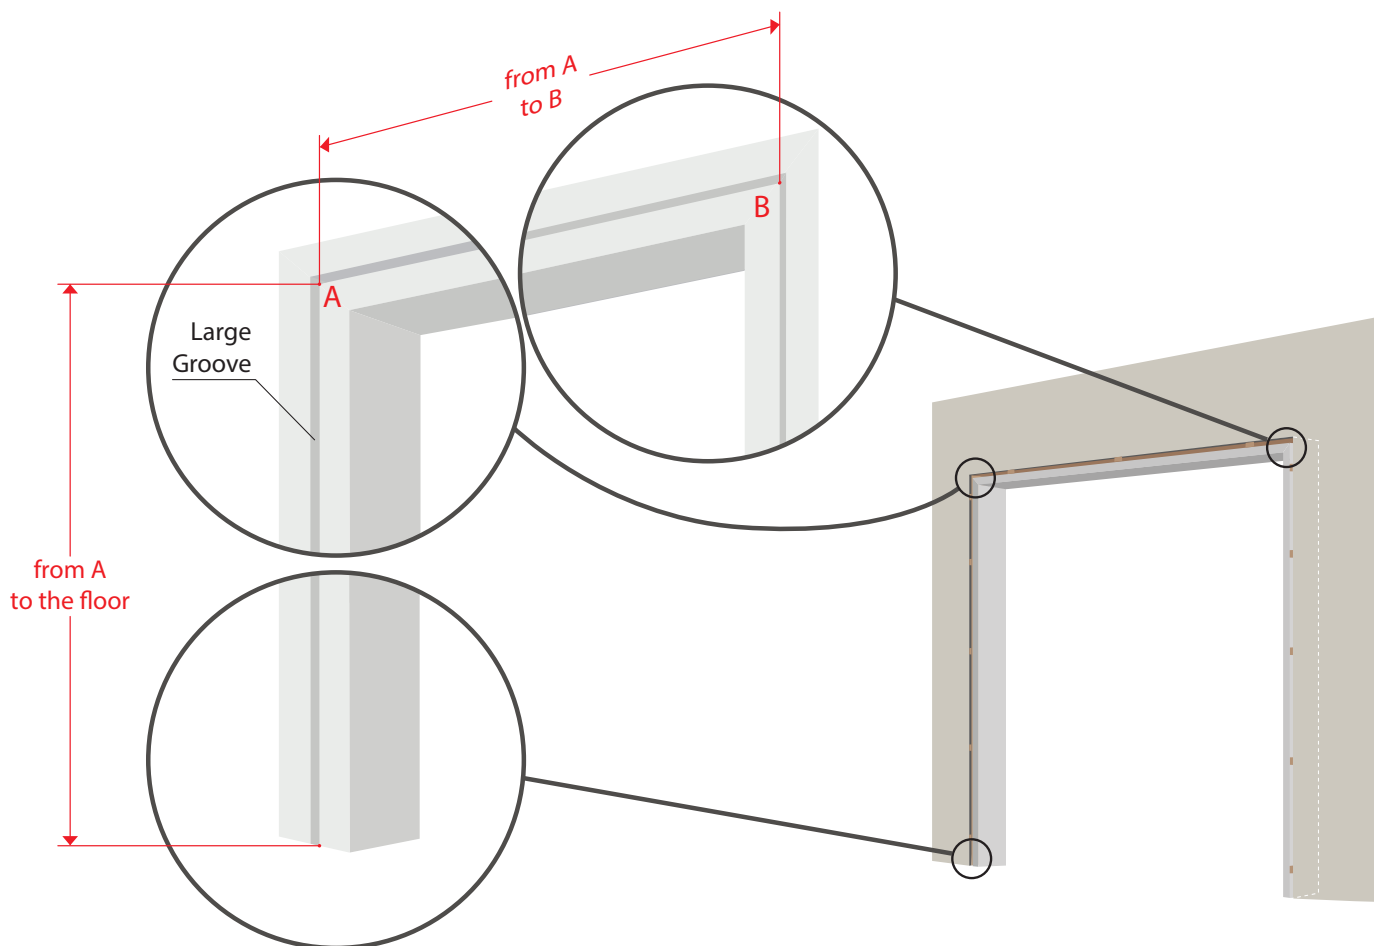


- 10** Measure the distance:
- from A to the floor;
 - from B to the floor;
 - from A to B
- with large and small grooves.

Large groove


Small groove

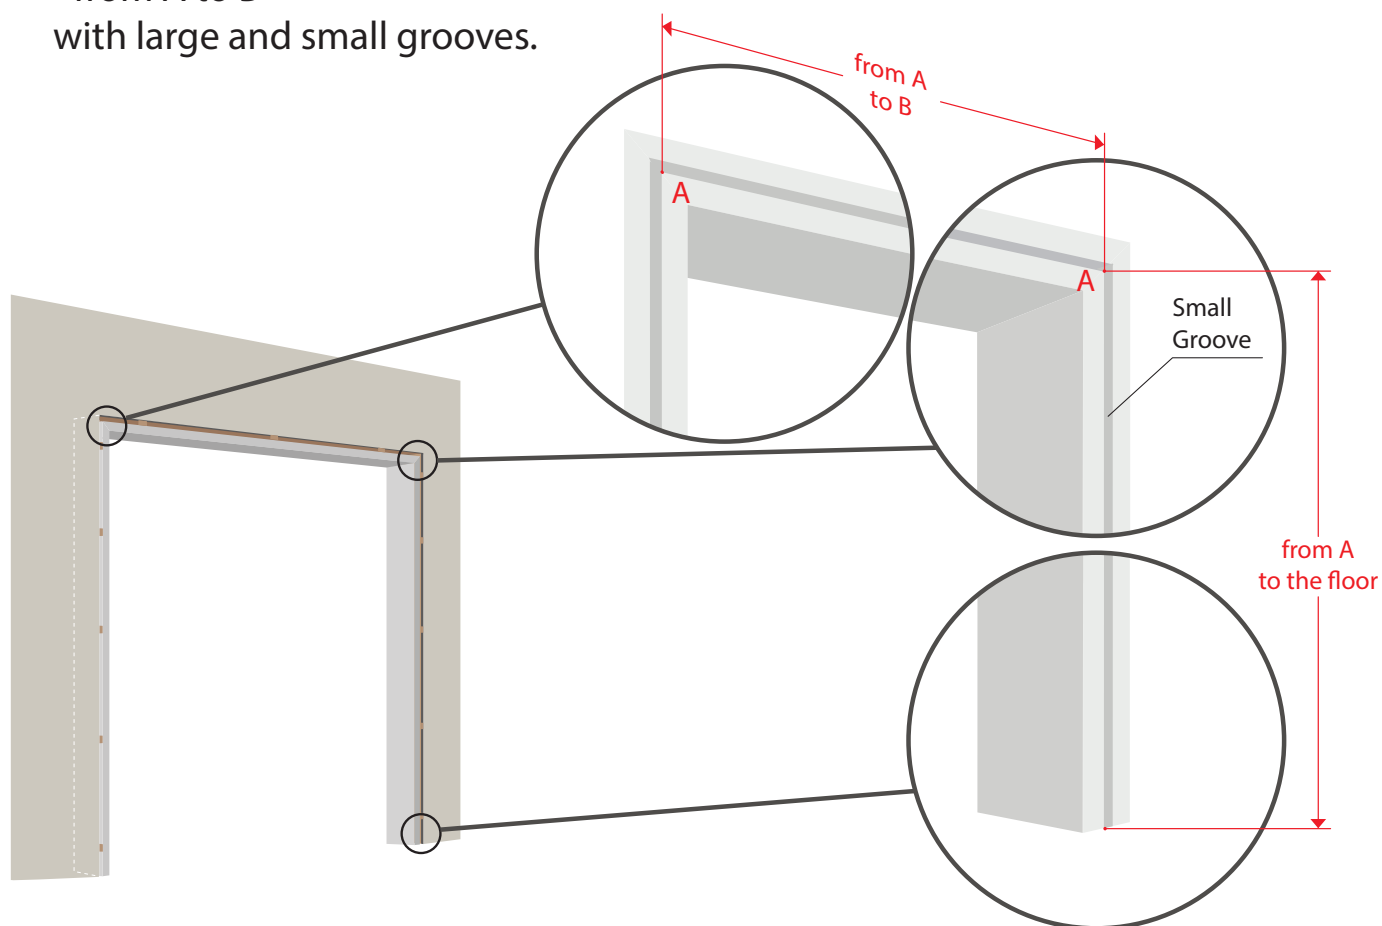



- 11** Using a pencil (as shown), mark the distance from A to the floor and from B to the floor for the vertical casings.
Using a pull saw, cut the vertical casings at a 45° angle where marked.

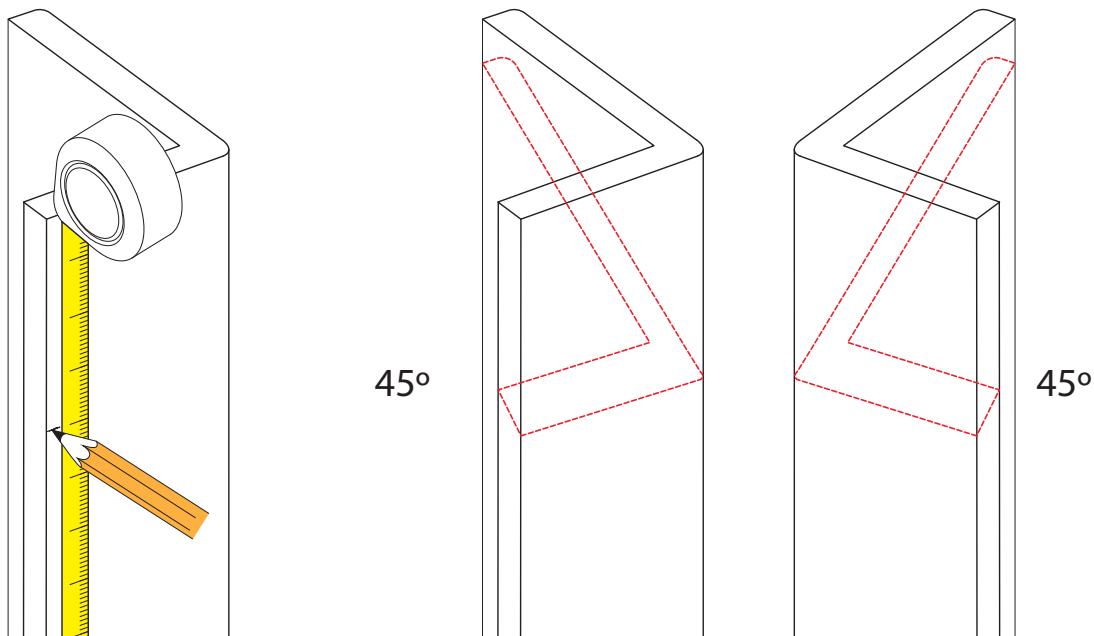



- 12** Using a pencil (as shown), mark the distance from A to B for the header casing.
Using a pull saw, cut the header casing at a 45° angle where marked, on both sides.

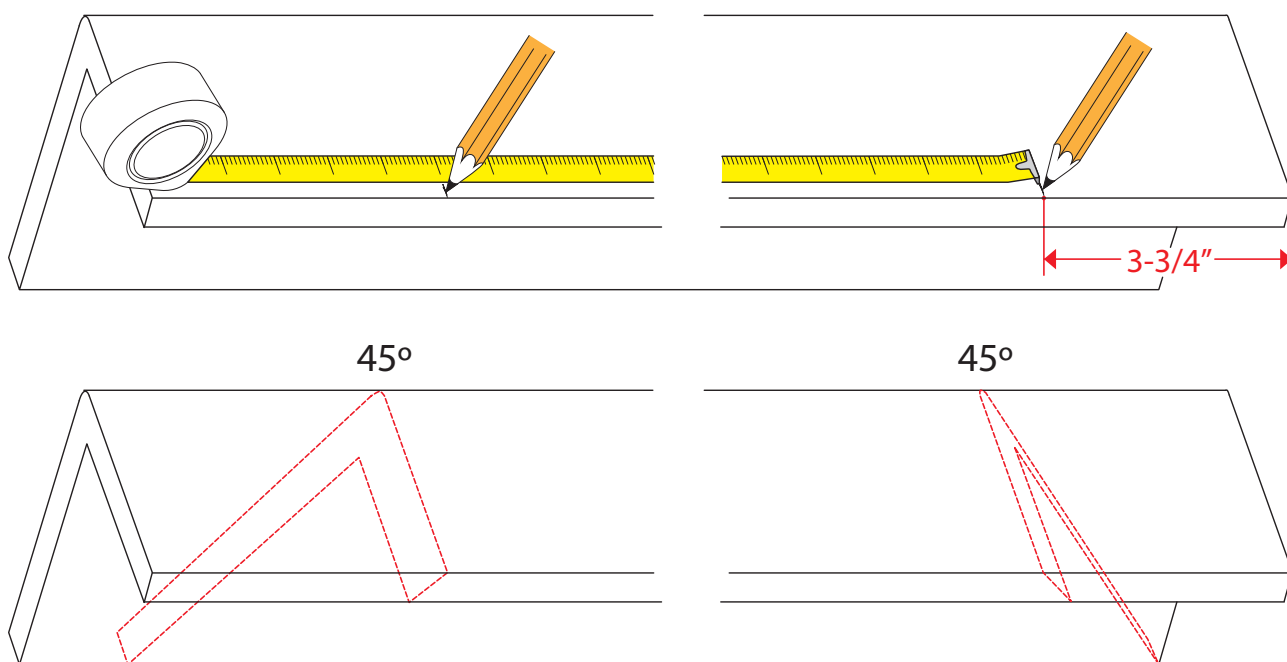


- 13** Install the flat casing in the small groove and the L-casing in the large groove using liquid nails.

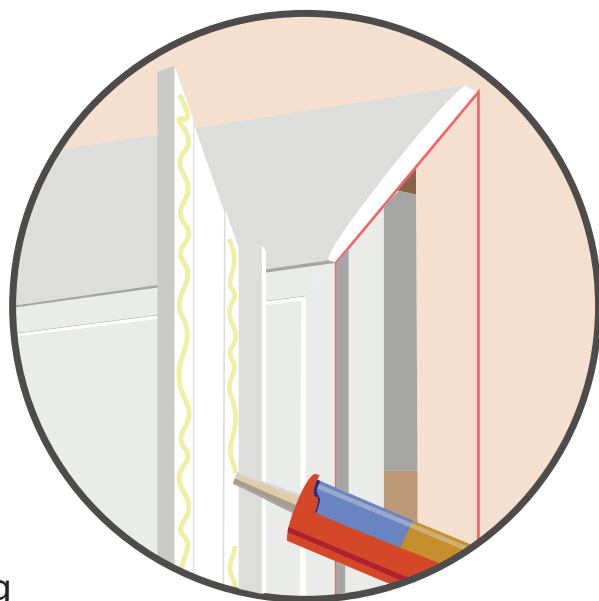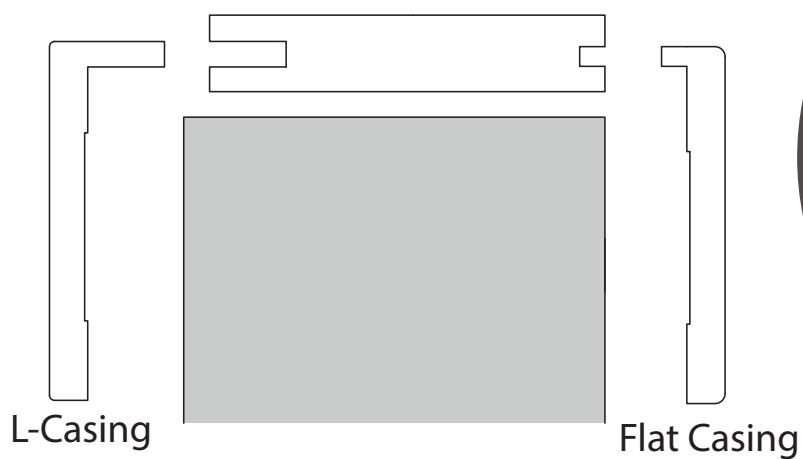


- 14** Secure in place using a nailgun with 10d finish nails.

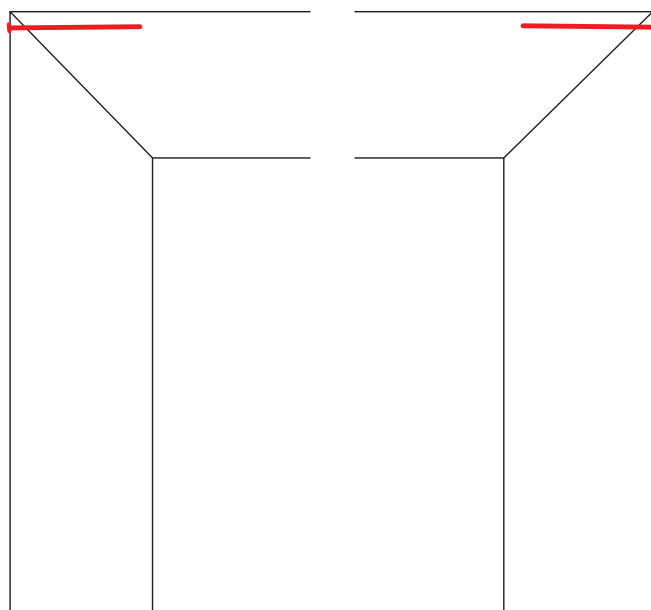
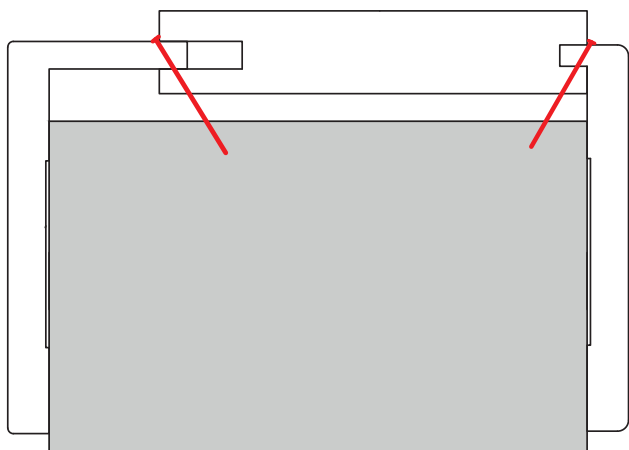


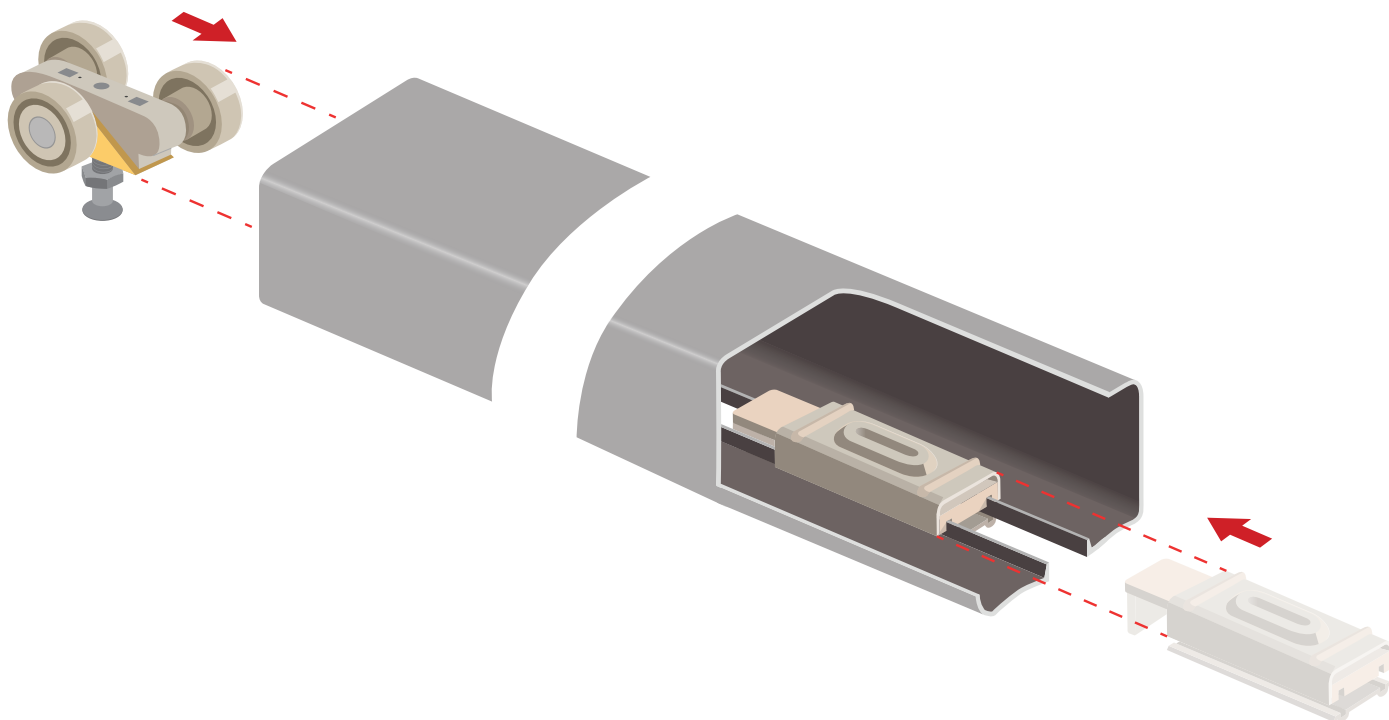



- 15** Insert the roller and the bracket for the upper pivot.

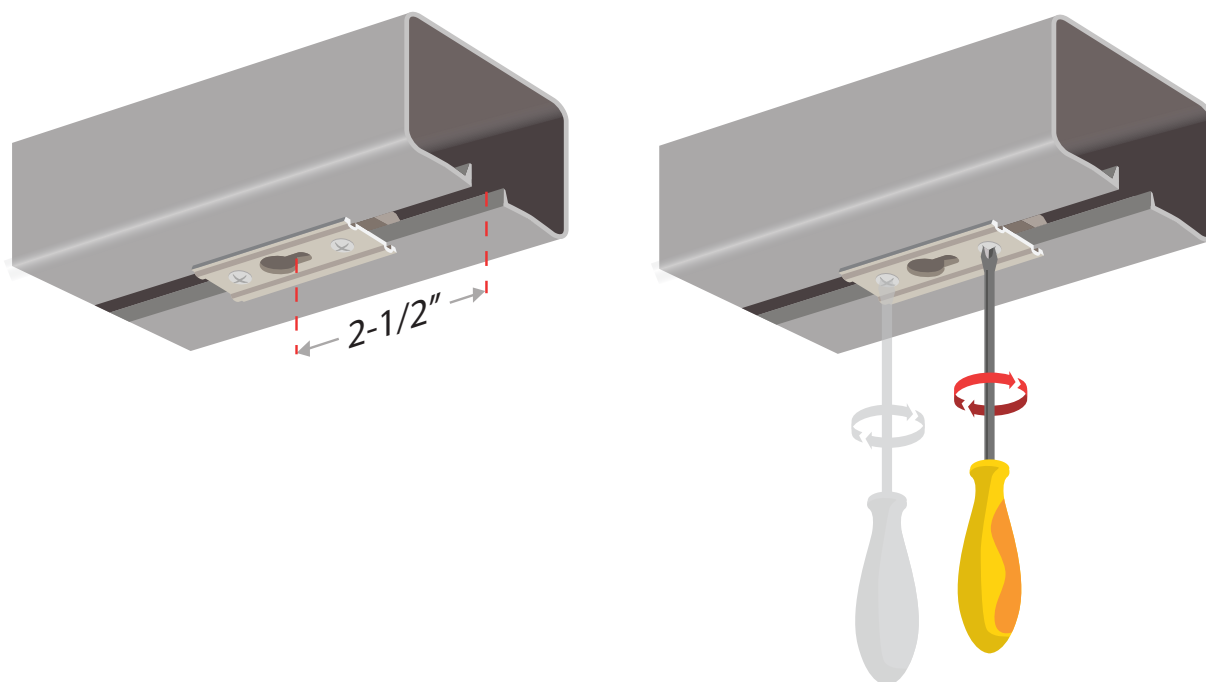


- 16** Attach the pivot.

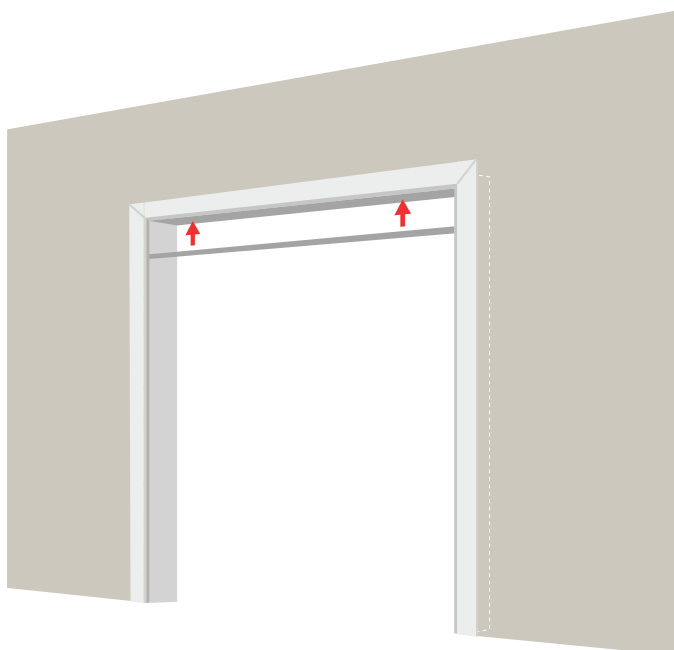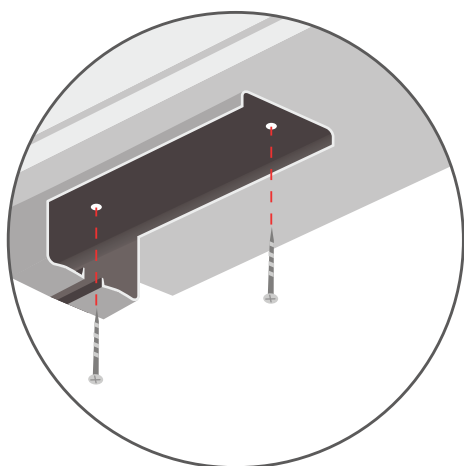



17 Install the track in the opening.

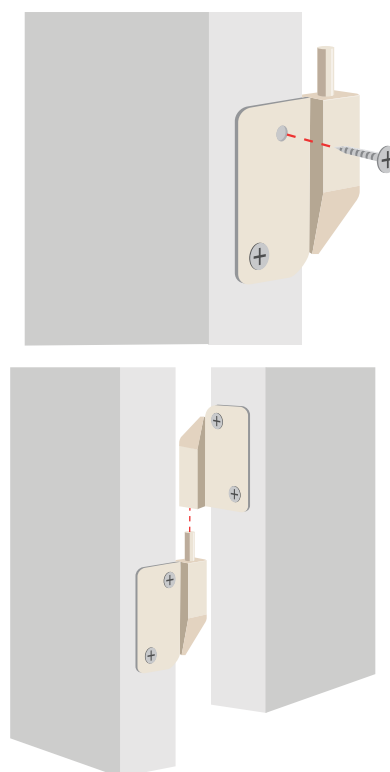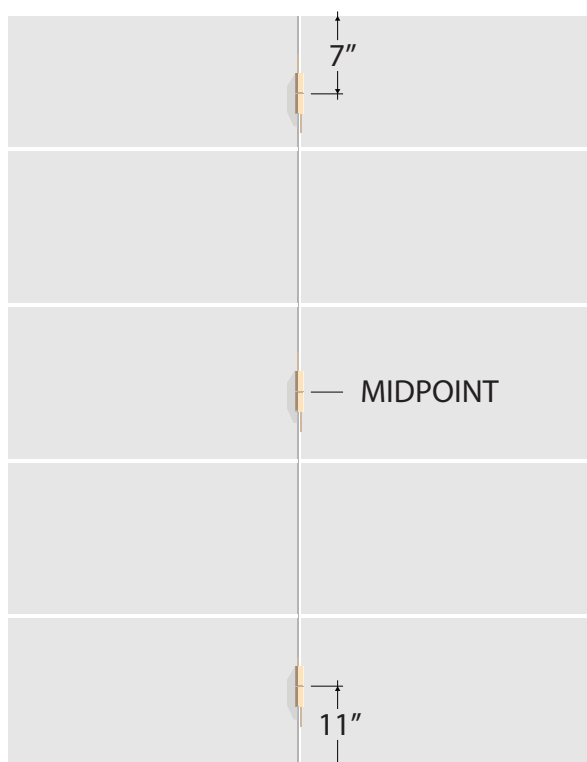




18 Attach the hinges as shown in the picture.

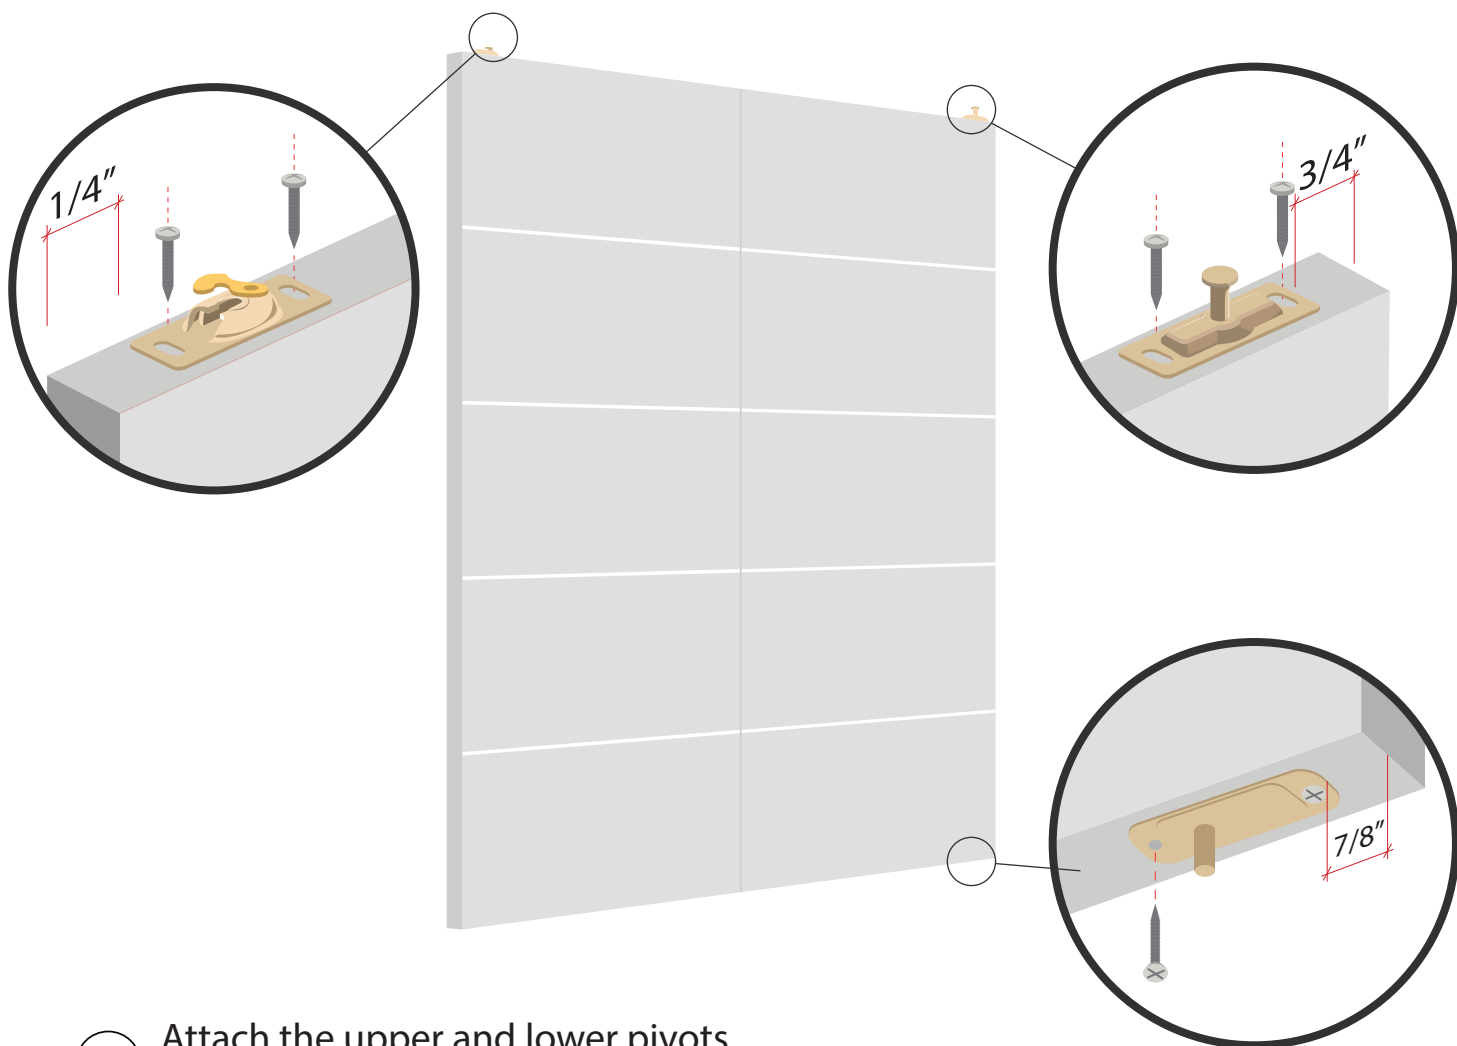

- 19** Attach the upper and lower pivots.
Attach the locking arm.

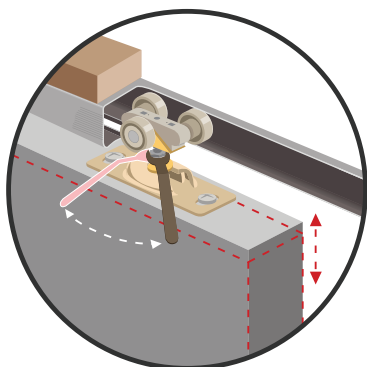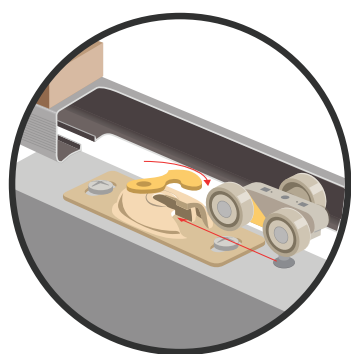

- 20** Hang the doors on the track and adjust the height.

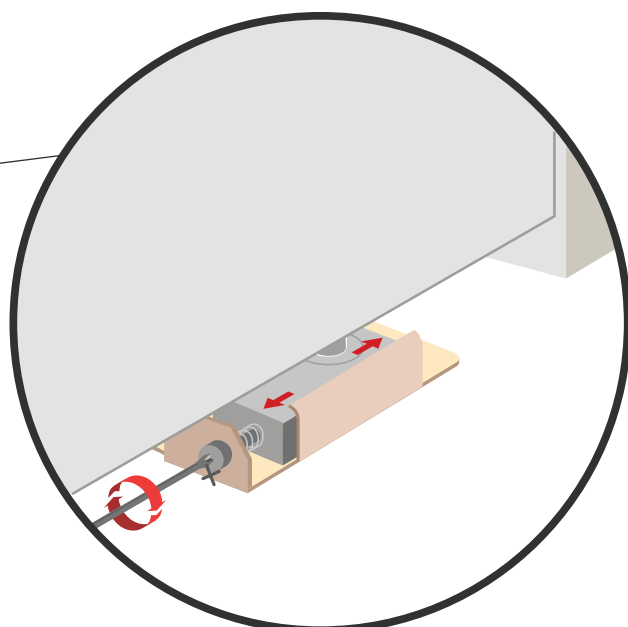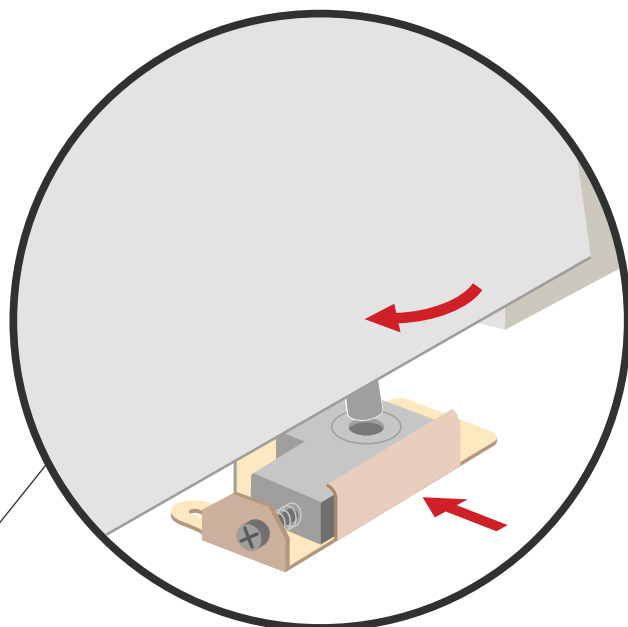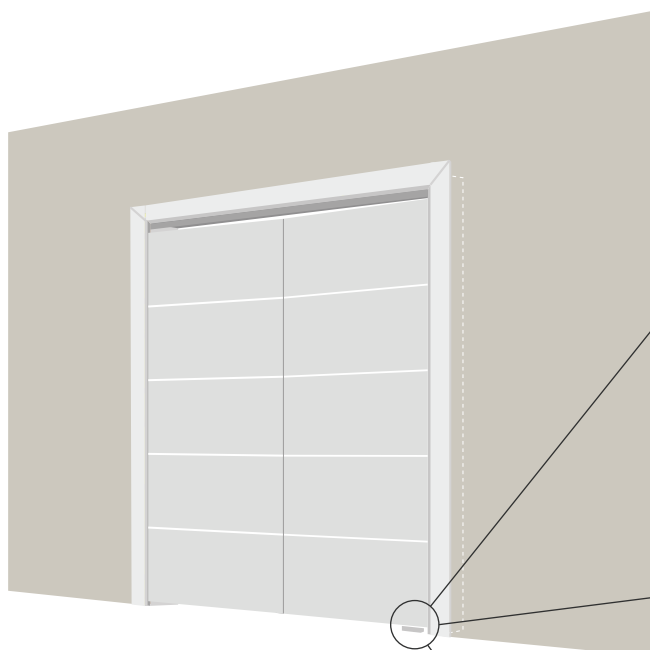

- 19** Insert the lower pivot into the bracket and adjust it.

